


# EYELASH AND BROW

8110

## INSTRUCTION MANUAL

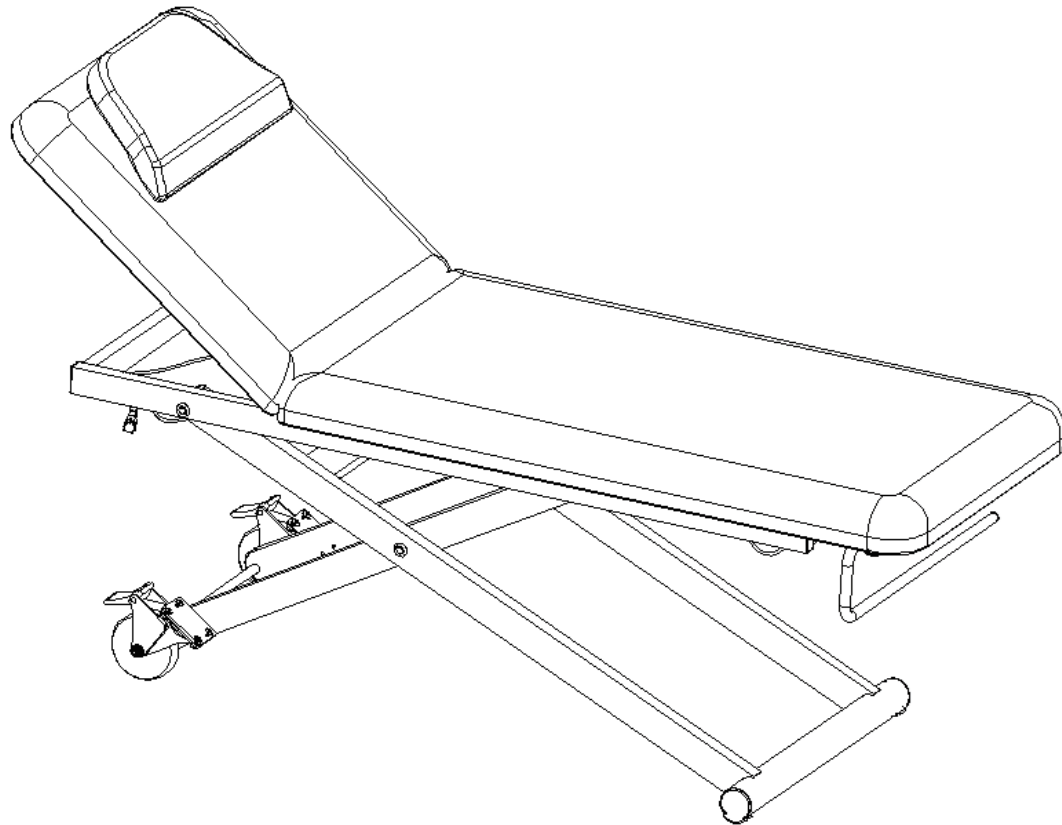

EN

# CONTENTS

Assembly Instructions	3
Technical data	3
List of accessories	4
Attentions	9
Aftercare Instructions	11
Contact Us	12

Please read the operation manual before using the product.



Please put the operation manual in the place easy for you to read and you can read it at any time.

## ASSEMBLY INSTRUCTIONS

### Product Specification :



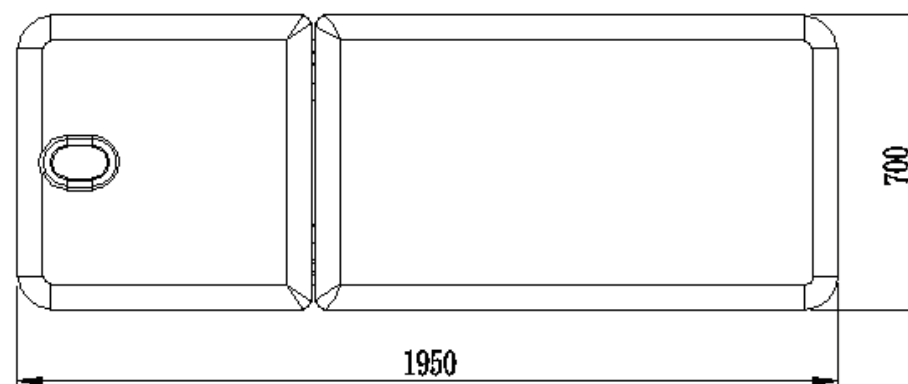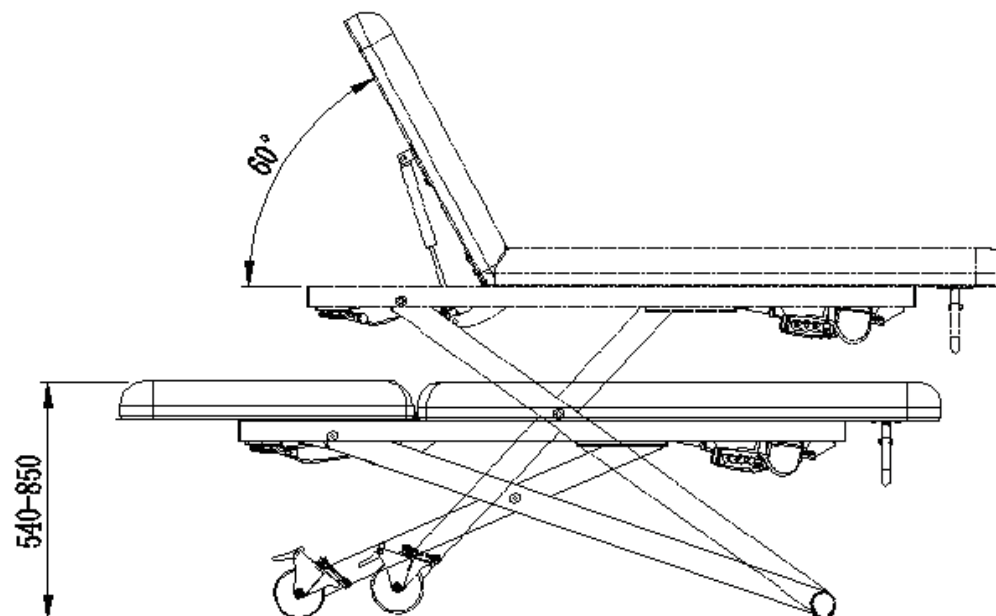

#### Technical data :

Dimension	1950x700x540~850mm
Max load capacity	180kg
Net Weight	52 kg
Adjustable range of Height	310mm
Padding	7.5cm Sponge




# ASSEMBLY INSTRUCTIONS

## List of accessories


Accessories	Picture	QTY
Pillow		1 pcs
Paper Holder		1 pcs
Pin		2 pcs
B Clip		2 pcs

### Assembly Instruction :

1. Leg of Table assembling : As below picture, lining up the mounting holes in leg and mounting holes in the frame of table, then insert pin and B clip in turn

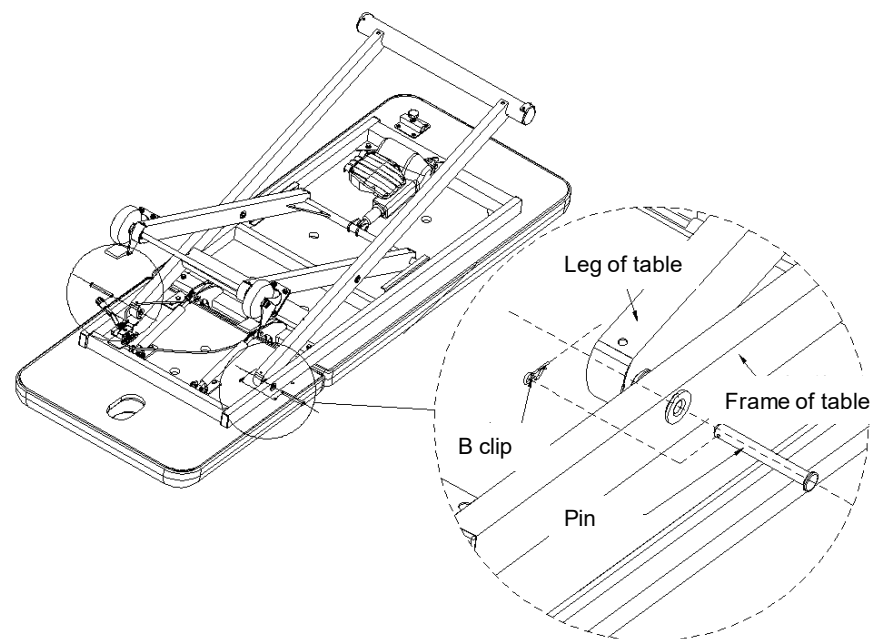


2. Paper holder assembling :As below picture, loose rotary knob under the bottom of table, then insert paper holder , after that screw up rotary knob

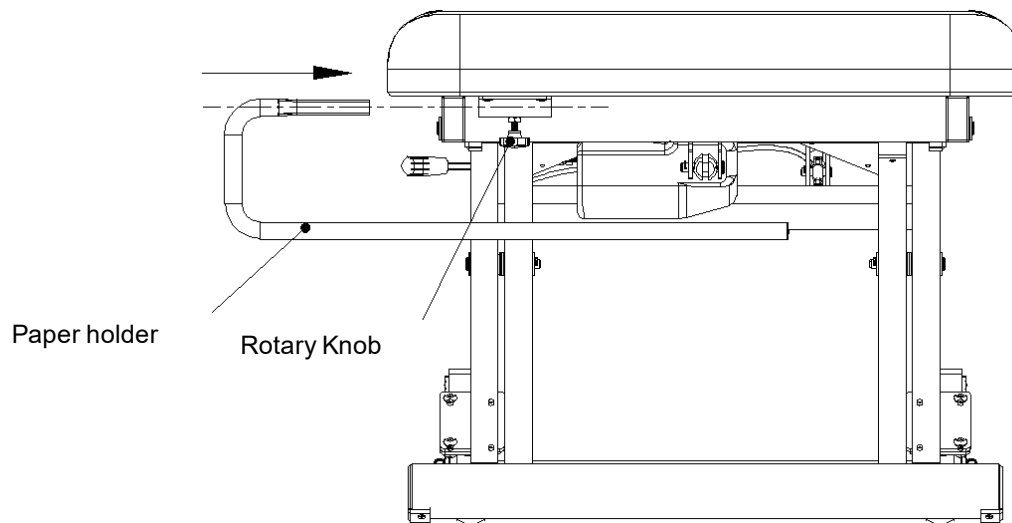


### Operating method

1. The height adjustment:

a. The whole table could be up and down by press these buttons: 

# ASSEMBLY INSTRUCTIONS

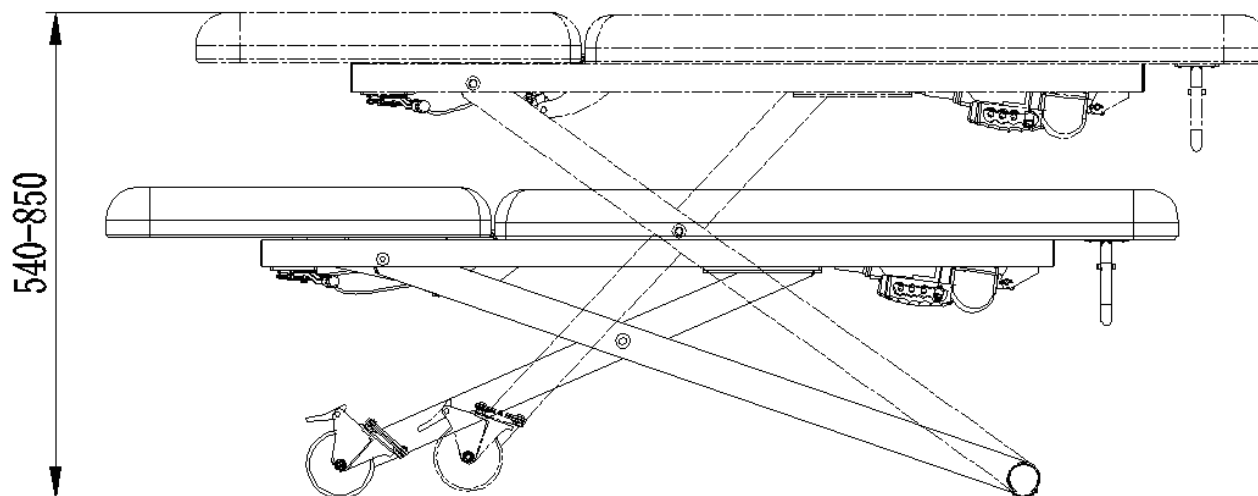


b. The wheels must be unlocked during up and movement




wheel - unlocked status

c. The wheels must be locked once the table reach the correct height for use

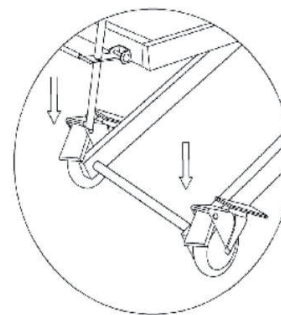


### 2.The backrest adjustment:

a.The angle of backrest could be raised up by pull the switch handle

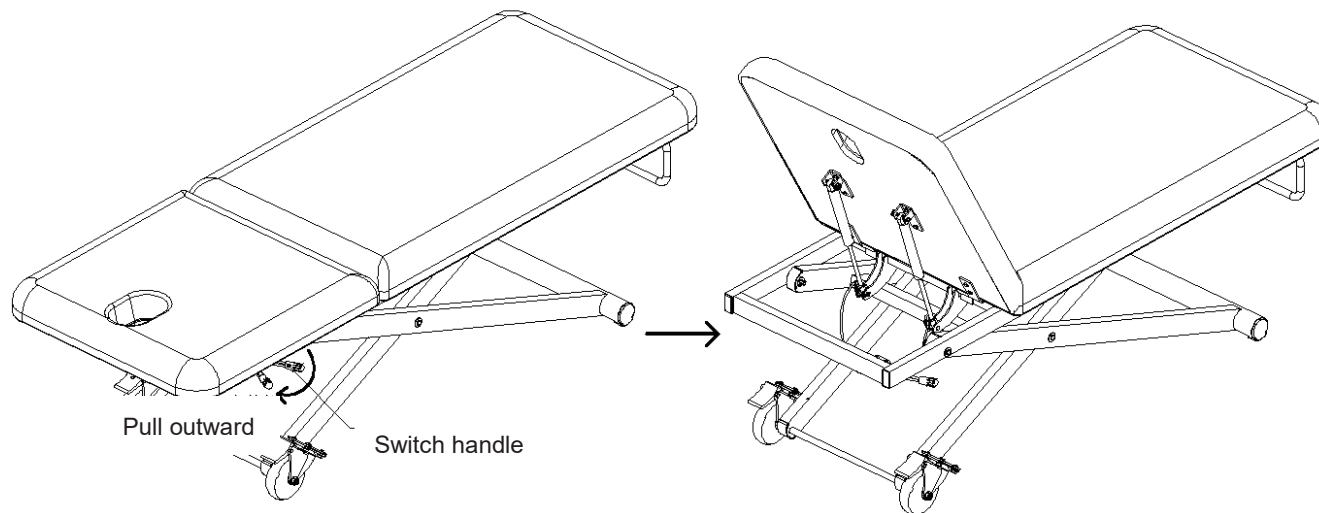

b.The angle of backrest could be decline by pulling switch handle outward by one hand then press the backrest to correct position by another hand, after that release the handle

# ASSEMBLY INSTRUCTIONS

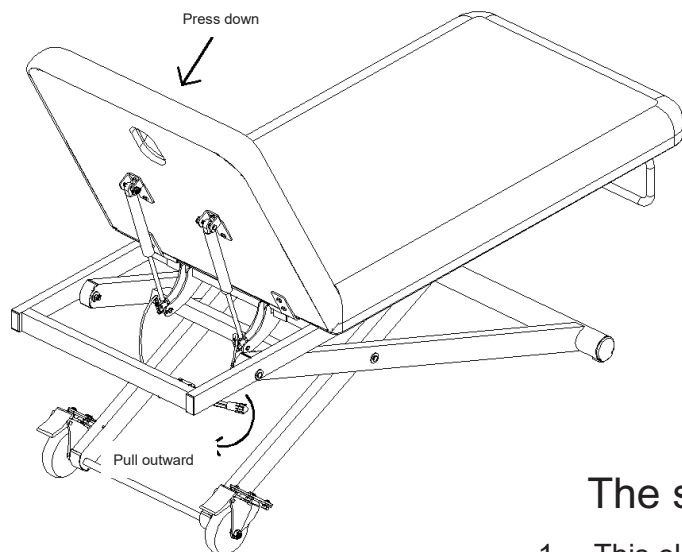


## The suggestive instructions

1. This electric massage bed uses a three-wire power cable. Meanwhile it should be inserted into the three-hole power socket with earth wire. And it should be assured that it can be connected to the earth wire smoothly so that it can prevent people from getting electric shock while functioning normally.
  2. All the plugs, buttons and other components connected to the power cable must not dip in the water or other liquid.
  3. It is forbidden to put your hands, feet, head or other part of the body into the gap
- ①②③④ while massage chair is running when you press the manual control panel
3. 4.It is prohibited to use when plugs, buttons and other components connected to the power cable are broken.
  4. It should be noticed that the frequency is 6min/h when the motor of this massage chair is used.
  5. The maintenances should not be dealt with any person without official training.



### Attentions

1. Someone with osteoporosis or heart problem should not use this massage chair.
2. Women being pregnant or in menstruation should not use this massage chair.
3. Someone inured or with disabilities should not use this massage chair.
4. Children under 14 years old without any supervision and someone unconscious should not use this massage chair.
5. Breakages of the power cable and plug should be eliminated before it' s normally used. Breakages should be dealt with by someone professionals or service providers.
6. The voltage should accord with the safety voltage before it' s officially used. And the wrong voltage may lead to the breakdown of the product.
7. Wet hand is not allowed to touch power to avoid shock.
8. The product should not plug in before it' s already installed.
9. The power cable should be put away so that pedestrian will not trip up and fall.
10. The appearance of the product should cleaned by the use of the soft towel with diluted neutral detergent.
11. It should be unplug when it' s not used.
12. Do not dismount this product without any authorization. Please inform the official service providers to deal with the maintenances

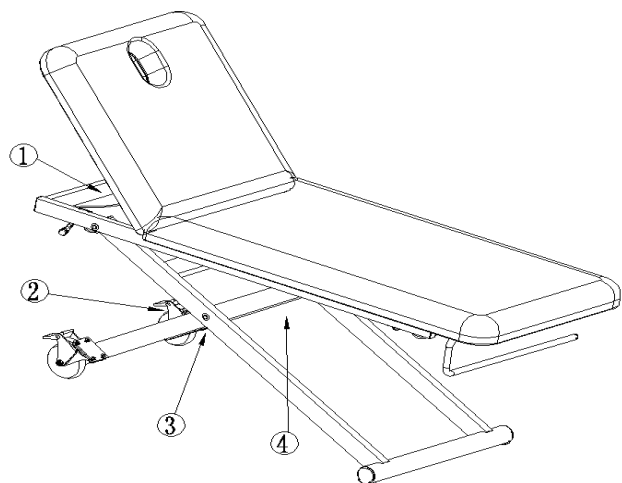

### Maintenance

1. Daily cleaning  
You can wipe out the dust by using soft dry towel.
2. Eliminating the stubborn dirt  
As we all know, it is hard to eliminate the stubborn dirt by using normal dry towel. In this case, you can use soft towel with diluted neutral detergent to clean it first. And then you can usedry towel to scrub.

# ASSEMBLY INSTRUCTIONS

3. It's prohibited to use benzene, diluent, gasoline or other solvent.  
These solvents may damage the leather or it may cause the corrosion of the products' appearance.
4. Storage and operating environment  
Don't put the product under the strong sunlight and moisture environment. Otherwise it may cause the damages of the product.
5. It is allowed to use this product under the temperature from -5°C to 50°C and the humidity from 45% to 85%.


## Fault diagnosis

If there is something wrong when you use the product, please try to check and eliminate the wrong operation as followings.


Phenomenon	Diagnosis	Operation of elimination
Press the pedal but without any responses.	1. Controller power switch start or not. 2. To check if the pedal has reached to maximum. 3. To check if the power plug is connected. 4.To check if each connecting plug of the transformer is connected.	1.Try to re-start the controller power switch. 2. Try other buttons workable or not. 3.Disconnect the power plug and re-plug it again. 4. Re-plug and connect it again.
Letting out noises and shaking while going up and down	Screw loosen	Tighten all the screws
The light is still off although the switch is on.	The fuse has burned out.	Replace the fuse.

Remarks: It will be not informed if the improvements of the product do not influence appearance and function.


## AFTERCARE INSTRUCTIONS

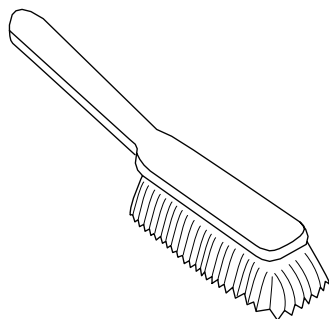


Brush away excess hair

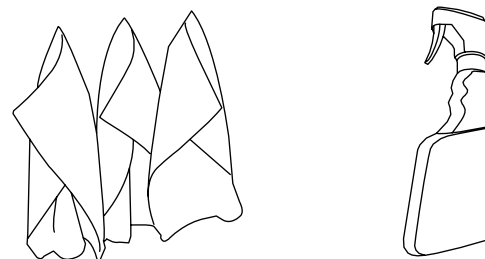

Wipe clean with a cloth dampened in a mild leather cleaner or wipe dry with a clean cloth

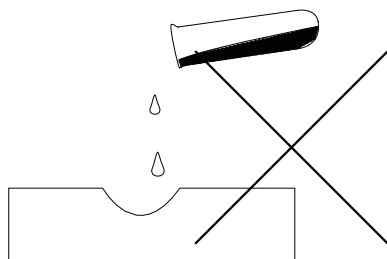

Avoid the use of abrasives, bleaches or solvents

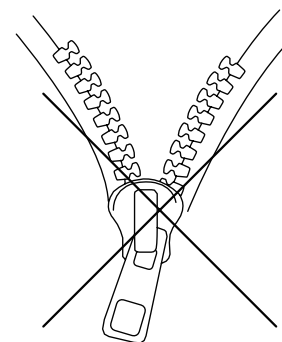

Never remove and wash leather covers

After an initial period of use, check all fastenings for any loosened screws etc. If found, please tightened appropriately

## CONTACT US

### DIR BIRMINGHAM (HEADQUARTERS)

66 Rea Street South  
Birmingham  
B5 6LB  
UK  
Sales: +44(0)800 085 3667  
Customer Service: +44(0)121 6433877  
Fax: +44(0)121 6333291  
Email: sales@dirgroup.co.uk  
Website: www.dirsalonfurniture.uk

### DIR LONDON

Unit 1 River Road Business Park  
33 River Road, Barking  
Greater London IG11 0DA  
UK  
Sales: +44(0)20 8591 9310  
Fax: +44(0)20 8594 4147  
Email: sales.london@dirgroup.co.uk  
Website: www.dirsalonfurniture.uk

### DIR NEW YORK

24 Woodward Ave.  
Suite C  
Queens, NY 11385  
USA  
Sales: +1 (718)628-6668  
+1 (800)728-2008  
Fax: +1 855-628-5168  
Email: sales@dirsalonfurniture.com  
Website: www.dirsalonfurniture.com

### DIR COLOGNE

Konrad-Adenauer-Straße 25  
50996 Köln  
Germany  
Sales: + 49 (0) 221 / 88888.128  
Fax: + 49 (0) 221 / 88888.122  
Email: sales@dirgroup.de  
Website: www.dirgroup.de

### DIR IRELAND

Unit 5 Block E  
Riverview Business Park  
Nangor Road  
Dublin 12  
Republic of Ireland  
Sales: +353 (01) 429 7969  
Email: sales.ireland@dirgroup.ie  
Website: www.dirgroup.ie

### DIR CHINA

广东伊众健康科技有限公司  
Guangdong Yizhong technology co Ltd  
广东顺德龙江龙峰大道38号  
全国统一热线 :  
+400 865 5603  
邮箱: sales@dirchina.cn  
官网 : www.dirchina.cn

If you have any enquires regarding the product warranty, please contact our customer services team.

[www.dirsalonfurniture.uk](http://www.dirsalonfurniture.uk)